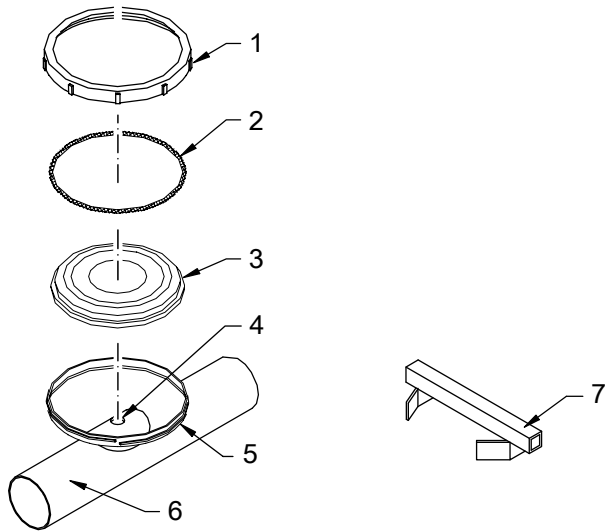
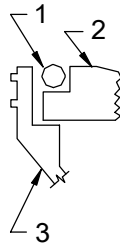

Install ceramic diffusers

1. Retainer ring
2. O-ring
3. Diffuser
4. Orifice
5. Holder
6. Air distributor pipe
7. Spanner wrench



1. Set the diffuser in the holder with the dished side and peripheral stepped edge up.
2. Lubricate the diffuser O-ring with a small amount of the lubricant provided.
3. Place the diffuser O-ring in the slot or void between the diffuser holder vertical wall and the raised portion of the diffuser.

1. O-ring
2. Diffuser
3. Holder



O-ring placement

4. Turn the retainer ring to a hand-tight position.
Make sure the O-ring stays in place.
5. Turn the retainer ring an additional 30°, using the spanner wrench. Do not exceed 90°.