

Professional Plus

WATER QUALITY INSTRUMENT - SPECIFICATIONS



Professional Plus The YSI Professional Plus is not a refinement. It came straight out of the imagination of our customers... and the ingenuity of a multi-disciplined team dedicated to making the ideal solution come to life. Our focus never wavered because listening to our 2.254customers is a continuous process, and the heart and soul of our commitment. 2.064 Designed to be tough and smart in the lab or field. And extremely versatile. The Pro Plus accommodates any combination of YSI Pro Series cables, sensors, and accessories. Want to measure DO in the field? Maybe pH/DO/Nitrate? Or perhaps you need it to be a lab instrument that measures BODs? Whatever you need...the Pro Plus is your choice. YSI Pro Plus. The ultimate handheld sampling instrument. Tougher. Smarter. More Versatile.



Tougher

Do your job with confidence even in the harshest field conditions. The drop-tested Pro Plus was designed tough with military-spec connectors, a two-year warranty on all cables, weighted sensor guards, and a rubber over-molded case with three-year warranty. Its interchangeable sensors and extra-durable cables nearly eliminate down time. And its low overall cost of ownership means you're making a worthwhile investment for years to come.



The Pro Plus uses the rugged, IP67, Military Spec (MS) 1/4 turn lock, bayonet-style connector.



Quatro Cable

The multiparameter Quatro cable allows the measurement of temperature, conductivity, salinity, dissolved oxygen and any two ISEs -pH, ORP, ammonium, nitrate or chloride.



How Tough is TOUGH?

What a Come-back

A YSI customer accidentally dropped his Pro Plus off a 40-foot bridge into the river below. A week later, he and his team came back. Using a long pole to scrape the river bottom, they found the cable and then the meter. They were amazed to find that – after a week submerged in a muddy river bed – their Pro Plus still worked.

Not All is Lost

A YSI wastewater customer knocked a Pro Plus into an aeration basin. Seemingly lost for good, he reluctantly moved on. One year later, the tank was drained to complete minor maintenance. And there lay the meter. After a bit of cleaning, they turned it on. Not only did it work, but it's still being used today.

only**YSI** Easy-to-install cable weights; can be daisy-chained for additional weight

only**YSI** Rubber, over-molded IP-67 waterproof case (even without battery cover)

3-year instrument warranty

only**YSI** 2-year cable warranty

Rugged cables, sensors, and military-spec connectors

only**YSI** Drop-tested 1 meter at all angles

Scratch-resistant lens; viewable with polarized glasses

Instrument floats

Weighted, user-replaceable multi-sensor design



This Pro Plus was dragged nearly half a mile down a gravel road off the back of an ATV. They dusted it off and turned it on.



Cable Options Field

(order ISE and DO sensors separately)

Single Parameter Options

60510 - ISE (pH, ORP, pH/ORP, ammonium, chloride, nitrate)*

60520 - DO (galvanic, polargraphic)**

60530 - Conductivity/Salinity (sensor included)

Single Parameter Options with Conductivity (included)

6051030 - ISE/Conductivity 6052030 - DO/Conductivity

Dual Parameter Options

6051010 - ISE/ISE 6051020 - ISE/DO

Multiparameter Options

Quatro - ISE/ISE, DO/Conductivity

- * Choice of ISE; pH, ORP, pH/ORP (not recommended on the 6051010 or Quatro cables) Choice of ISE; Ammonium, Nitrate, or Chloride for fresh water only
- ** Choice of DO; Galvanic, Polarographic Choice of cable lengths: 1, 4, 10, 20, 30 meters all (up to 100 meters on 60520 only)

Smarter

The technology-smart YSI Pro Plus has all the built-in support you'll need for the lab or field. It provides multiple languages, detailed GLP data, on-screen Help to eliminate the need for a bulky manual, sensor diagnostics, up to six-point auto-buffer recognition, re-cal prompts, user-defined auto-stable function, and security passwords for extra protection.

And much more.



5000 data set memory

only**YSI** Free, Data Manager desktop software and ProComm II saddle

Interval or single-event logging

only**YSI** 100 folder & site list data structure

Password protection

Detailed GLP data

USB connection also powers the instrument

only**YSI** 6-point cal with auto-buffer recognition

User-adjustable auto-stable with prompts

User-upgradeable software via waterproof USB port

Recalibration prompts

only**YSI**

Search function filters user-defined data information



The Pro Plus shown with the 605107 labgrade pH sensor and the 605170 lab stand.



Cable Options Laboratory



All field cables can also be used in the lab and are ideal to use with the 063507 tripod.

Self-Stirring BOD 605780 BOD 2-meter cable




BOD Analyst Pro software automates BOD testing.

Top View 2.21" 5.6 cm 3.25" 8.3 cm 1 Front View

More Versatile

- 1 Pro Plus Instrument
- 2 Single Port Conductivity Only
- **3** Single Port Cable
- 4 Single Port Cable with Conductivity
- **5** Dual Port Cable
- **6** Quatro Multiparameter Cable

Professional Plus Instrume	nt General Specifications			
Auto Stable	User-defined auto-stable function holds stable readings on display when criteria is met			
Barometer	Built-in barometer			
Buffer Recognition	Auto buffer recognition for US and NIST buffers			
Certifications	RoHS, CE, WEEE, C-Tick, VCCI, FCC, IP-67, 1-meter drop test, Assembled in USA			
Connectivity	USB 2.0; ProComm II communications saddle and USB cable included; user-upgradeable software via USB and website			
Connector	MS (military spec) waterproof with bayonet lock			
Data Management	Data Manager desktop software included; 100 user-defined folders and site names			
Data Memory	5,000 data sets (data, date, time, user-defined info); 100 GLP files			
Dimensions	$8.3\mathrm{cm}$ width x $21.6\mathrm{cm}$ length x $5.6\mathrm{cm}$ depth ($3.25\mathrm{in}$ x $8.5\mathrm{in}$ x $2.21\mathrm{in}$)			
Display	Graphic display with detailed Help; backlit display AND keypad			
DO Membrane Response Times (T95; 100%-0) and Flow Dependence	1.25 mil PE = 8 seconds and 6 in/sec flow 2.0 mil PE = 17 seconds and 3 in/sec flow 1 mil Teflon° = 18 seconds and 12 in/sec flow			
DO Sensors	Polarographic or galvanic field sensors; self-stirring polarographic BOD sensor for the lab			
Field Cables	Standard lengths of 1, 4, 10, 20, or 30 meters - up to 100 meters on DO only cables; all 4-meter and longer cables include a cable management kit			
Flow Cell	Single, dual and multiparameter Quatro cable all flow cell compatible			
GLP Compliance	Yes; detailed GLP information is stored and is available to view, download or print			
Lab Cables	BOD sensor includes 2-meter cable; 1 or 4 meters on lab pH, ORP and pH/ORP cables			
Languages	English, Spanish, German, French, Italian, Norwegian, Portuguese, Japanese, Chinese (Simplified & Traditional)			
Logging Modes	Single or Continuous			
Operating Temperature	-10 to 60°C			
Power	2 alkaline C-cells provide 80 continuous hours at ambient temperature without backlight; ProComm II saddle provides USB power or optional wall power, cigarette lighter, and universal cell phone charger options			
Storage Temperature	-20 to 70°C			
User ID	Optional user ID for data security			
Warranty	3-year instrument; 2-year field cables			
Waterproof	IP-67 (even with the battery cover off); floats			
Weight with Batteries	475 grams (1.05 lbs)			

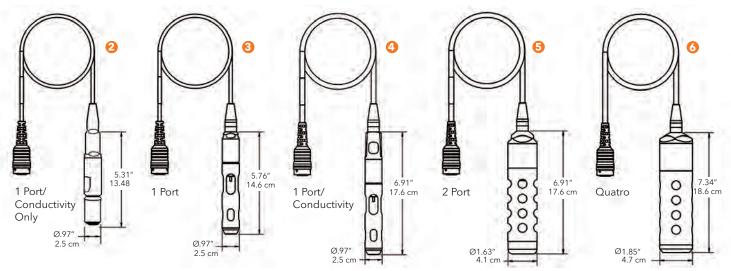

	Sensor Type	Range	Accuracy	Resolution	Units	Calibration
Dissolved Oxygen (%) (temp comp range -5 to 45°C)	Polarographic or Galvanic	0 to 500%	0 to 200% (± 2% of reading or 2% air saturation, whichever is greater) 200% – 500% (± 6% of reading)	1% or 0.1% air saturation (user selectable)	%	1 or 2-points with zero
Dissolved Oxygen (mg/L) (temp comp range -5 to 45°C)	Polarographic or Galvanic	0 to 50 mg/L	0 to 20 mg/L(±2% of the reading or 0.2 mg/L, whichever is greater) 20 to 50 mg/L(±6% of the reading)	0.1 or 0.01 mg/L (user selectable); 0.1% air saturation	mg/L, ppm	1 or 2-points with zero
Temperature (Field rugged cables)		5 to 70°C	$\pm 0.2^{\circ}$ C ($\pm 0.3^{\circ}$ C cables over 45-meters)		0.1°C	°C, °F, K
Temperature (Lab-grade)*		0 to 40°C	±0.35°C	0.1°C	°C, °F, K	
Conductivity**	Four electrode cell	0 to 200 mS/cm (auto range)	±0.5% of reading or 0.001 mS/cm, whichever is greater (1-, 4-m cable) ±1% of reading or 0.001 mS/cm, whichever is greater (20-m cable)	0.001 mS (0 to 500 mS); 0.01 mS (0.501 to 50.00 mS); 0.1 mS (50.01 to 200 mS)	μS, mS	1 point
Salinity	Calculated from conductivity and temperature	0 to 70 ppt	±1.0% of reading or 0.1 ppt, whichever is greater	0.01 ppt	ppt, PSU	1 point
рН	Glass Combination Electrode	0 to 14 units	±0.2 units	0.01 units	mV, pH units	1, 2, 3, 4, 5, or 6 point (user selectable) US, NIST or Custom Buffers
ORP	Platinum button	1999 to +1999 mV	±20 mV in redox standards	0.1 mV	mV	1 point
Ammonium*** (ammonia with pH sensor)	Ion Selective Electrode	0 to 200 mg/L-N, 0 to 30°C	±10% of reading or 2 mg/L-N, whichever is greater	0.01 mg/L	mg/L-N, mV	1, 2, or 3 point (user selectable)
Nitrate***	Ion Selective Electrode	0 to 200 mg/L-N, 0 to 30°C	±10% of reading or 2 mg/L-N, whichever is greater	0.01 mg/L	mg/L-N, mV	1, 2, or 3 point (user selectable)
Chloride***	Ion Selective Electrode	0 to 1000 mg/L, 0 to 40°C	±15% of reading or 5 mg/L, whichever is greater	0.01 mg/L	mg/L-Cl-, mV	1, 2, or 3 point (user selectable)
Total Dissolved Solids (TDS)	Calculated from conductivity and temperature	0 to 100 g/LTDS constant range 0.30 to 1.00 (0.64 default)		0.001, 0.01, 0.1g/L	kg/L, g/L	
Barometer	Piezoresistive	375 to 825 mmHg	±1.5 mmHg from 0 to 50°C	0.1 mmHg	mmHg, inHg, mbar, psi, kPa, ATM	1 point
Instrument (Only Specificat	ions (at Ambient	Temperature)			
рН		-2.60 to 16.60	±0.1 mV (0.01 pH units)	0.1 mV (0.01 pH units)		
ORP		-1999 to +1999 mV	±0.5 mV	0.1 mV		
Conductivity		0.0 to 200 mS/cm each range	±0.1% FS ±1 digit for uS/cm to 0.1 mS/cm (range dependent)	0.0001 mS/cm or 0.1		
Dissolved Oxygen		0.00 to 90 mg/L; 0 to 550%	±0.2% FS (550% air saturation) ±1 digit (with 1.25 PE membrane at 10°C)	0.01 mg/L; 0.1% air saturation		
			1.23 FE III ellibratie at 10 C)			

^{*}Lab-grade cables include 605107, -108, -109, 605177, -178, -179 ** Derived parameters can include resistivity, salinity, specific conductance, and total dissolved solids

^{***}ISE sensors for freshwater only; 17-meter maximum depth



Order Guide

Step 1: Order Instrument Instrument 6050000 includes Data Manager software, the ProComm II communications saddle, and USB cable

Step 2: Order Cable(s)

☐ 605177 : 4-meter single junction pH sensor & cable
☐ 605108 : 1-meter single junction ORP sensor & cable
605178 : 4-meter single junction ORP sensor & cable
605109 : 1-meter single junction pH/ORP sensor & cable

09: 1-meter single junction pH/ORP sensor & cable **605179**: 4-meter single junction pH/ORP sensor & cable Step 3: Order Sensor(s)

605202: Galvanic DO **605203**: Polarographic DO **605780**: Self-stirring BOD (2-meter cable included) **deligition | 605101**: pH (ISE) **605102**: ORP (ISE)

: pH/ORP combination (ISE)³ : Ammonium (ISE) : Chloride (ISE) : Nitrate (ISE)

605323: Amplified pH Sensor (ISE) 605324: Amplified pH/ORP Sensor (ISE)

1 ISEs include pH, ORP, Ammonium, Nitrate, Chloride

2 Special order cables in 10-meter increments up to 100 meter available

3 Not recommended on 6051010 or 605790 cables. Only pH would appear.



No tools are required to install the sensors.



Step 4: Order Solutions
■ 3167 : 1,000 µs/cm conductivity solution (8 pints)
3168 : 10,000 μs/cm conductivity solution (8 pints)
3169 : 50,000 μs/cm conductivity solution (8 pints)
☐ 3682 : Zobell, ORP solution (125 mL)
3824 : pH 4, 7, 10 buffers (2 pints each)
□ 3841 : 1 mg/L ammonium solution (500 mL)
☐ 3842 : 10 mg/L ammonium solution (500 mL)
3843 : 100 mg/L ammonium solution (500 mL)
□ 3885: 1 mg/L nitrate solution (500 mL)
3886 : 10 mg/L nitrate solution (500 mL)
3887 : 100 mg/L nitrate solution (500 mL)
■ 5580 : Confidence Solution® to verify pH, ORP and conductivity data (not for cal)
Step 5: Order Accessories ☐ 603059: Flow Cell, Standard, 203 mL
603077 : Flow Cell Kit, 1- or 2-Port Sensor (includes 603059 & 603078)
606850: Quatro Cable Flow Cell
603078: Flow Cell Adapter, Single Port (used with 603059)
603056: Flow Cell Mounting Spike
603075: Carrying Case, Soft-Sided
603074: Carrying Case, Hard-Sided
603162: Carrying Case, Small, Soft-Sided
603069 : Belt Clip
□ 063517 : Ultra Clamp
063507 : Tripod
603062: Cable Management Kit
605978 : Weight, Sensor/Cable, 4.9 oz.
063019 : Weight, Sensor/Cable, 24 oz., 3"
063020 : Weight, Sensor/Cable, 51 oz., 6"
603070 : Shoulder Strap
626444: Lab Dock, Holds Meter and BOD probe

Please visit YSI.com/accessories for more information

What can Xylem do for you?

We're 12,500 people unified in a common purpose: creating innovative solutions to meet our world's water needs. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. We move, treat, analyze, and return water to the environment, and we help people use water efficiently, in their homes, buildings, factories, and farms. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise, backed by a legacy of innovation.

For more information on how Xylem can help you, go to www.xyleminc.com



Application Notes

A557 Silver Streak Bass (Aquaculture)

A567 ORP in Wastewater (Wastewater)

A570 Busseron Creek Watershed (Surface Water)

A572 Miami Conservancy District (Surface Water/Groundwater)

A583 Monitoring a Forest Invader (Surface Water)

A585 Ammonia in Aquaculture Ponds (Aquaculture)

A590 Kamchatka Peninsula Salmon (Surface Water/Aquaculture)

1700/1725 Brannum Lane

A597 Chronic Nitrate Exposure to Trout (Aquaculture)

A602 Oregon DEQ Nitrate (Groundwater)

visit ysi.com/applications



Yellow Springs, Ohio 45387 +1 937.767.7241 800.765.4974 (US) environmental@ysi.com a xylem brand www.YSI.com

Pure Data for a Healthy Planet, We Know D.O., Confidence Solution and Who's Minding the Planet are registered trademarks of YSI Incorporated. YouTube is a registered trademark. Teflon is registered trademark to DuPont.

Specifications are subject to change. Please visit www.YSI.com to verify all specs.







Connect with YSI:



Facebook facebook.com/myYSI



Twitter twitter.com/ysiinc



Scoop.it scoop.it/water-quality



LinkedIn

linkedin.com/company/ysi



YouTube youtube.com/ysiinc



Tumblr myysi.tumblr.com



Pinterest pinterest.com/myYSI



Scan this QR Code with your smart phone to watch an ordering guide video for the Pro Plus



